

QUICK START REMOTE GUIDE //



- D** - Displays Caller ID log
- C** - Launches local weather app
- A** - Launches apps

Button (s) Description

1. POWER	Switches the power on/off for the currently selected device Switches STB to power on or standby mode
2. SET UP	Set up remote for TV
3. TV/INPUT	Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4. DEVICE CONTROL	TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device DVD: Select to control DVD (if programmed) AUX: Select to control another device (if programmed)
5. TRANSPORT KEYS	Controls video program for LIVETV/DVR/VOD REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments PAUSE: Pauses video STOP: Stops playback of video
6. REC	Starts or stops recording a program
7. OPTIONS	Provides additional options for certain on-screen menu or highlighted item
8. MENU	Displays on-screen menu or home screen
9. INFO	Displays on-screen information about the current V/VOD/DVR program
10. BACK	Goes back one level within menus
11. NAVIGATION	ARROW KEYS: Navigates within the on-screen guide LEFT/RIGHT: Rewinds/Fast Forwards video
12. VOD	Feature enabled by your service provider
13. EXIT	Exits the current menu item or back to LIVE TV
14. GUIDE	Displays the on-screen program guide
15. SHORTCUT	Color-code buttons correspond to the features that are enabled by your service provider
16. LAST	Changes channel to the previously viewed channel.
17. CH/PG	Changes channel up/down or pages up/down within the on-screen program guide.
18. VOL +/-	Increases or decreases TV volume
19. MUTE	Turns TV volume on/off
20. NUMBER KEYS	Allows direct access to specific channels and menu items
21. CC	Toggles closed captioning on/off
22. DOT	Used when entering a period in certain channels. Displays on-screen keyboard for certain applications
23. MEDIA	Lists DVR recordings
24. DVR	Feature enabled by your service provider
25. LIVE TV	Brings you back to LIVE TV

Auto Program Remote for Television

1. Turn on TV.
2. Press the TV button.
3. Press and hold the Setup button until the LED light blinks twice.
4. Press the number keys "9" - "9" - "1".
5. Press the Power button.
** If the TV turns off after this step, press the STB button and set up is complete.*
6. Press the Channel Up button repeatedly until the TV turns off.
7. Press the Setup button until the LED light blinks twice to save the code.
8. Press the STB button.



***For additional assistance,
tune to Channel 9000 for a
video tutorial.***